

C2BW
Hand-holder
Electric Sprayer



1. Notice before usage/用前须知

Thank you for buying WIPCOOL COMPACT Series Electric Sprayer, we are dedicated to providing you with high quality products.

Please check if your ordered product is in good shipment condition with the correct accessories, any damage during transportation, please contact us or the local distributors in time.

This manual gives instructions on the correct operation, it's important that you follow this instructions carefully.

If there is any change in the product (including the specification), we won't inform you any more.

■尊敬的用户，感谢您对本公司的信赖与支持，欢迎您使用维朋公司C系列空调清洗机产品，我们将竭诚为您提供优质的的产品。

■请您仔细检查收到的产品是否与订购产品一致，备附件、使用说明等是否齐全，运输过程中是否有损坏，如果发现上述情形请及时本公司或当地经销商联系。

■在使用本产品前，请您务必仔细阅读此说明书，按产品操作规程进行操作。

■产品（包括说明书）以后若有任何改动，请恕不另行通知。

2. Main uses/主要用途

This sprayer features is resistant of strong acids & alkaline. So it is perfect for using on all kinds of detergent. It is also can be used for indoor yard spray such as gardening, flowers, washing, insecticide killing and so on.


此电动喷壶的特点是耐强酸和强碱。因此，它非常适合用于喷洒各种清洗剂。它还可用于室内庭院喷雾，如园艺、花卉、洗涤、杀虫剂、杀菌等。

3. Performance characteristics/产品特点

- (1) Save time and effort, and it has high efficiency;
- (2) Stable working pressure and even liquid atomization;
- (3) The Li-ion battery has a large capacity and can work continuously for about 2- 3hours when it is fully filled;
- (4) Automatic spraying, simple and convenient operation;

01

- (1)省时省力，效率高；
- (2)工作压力稳定，液体雾化均匀；
- (3)大容量锂离子电池，充满电后可连续工作约2-3小时；
- (4)自动喷涂，操作简单方便；

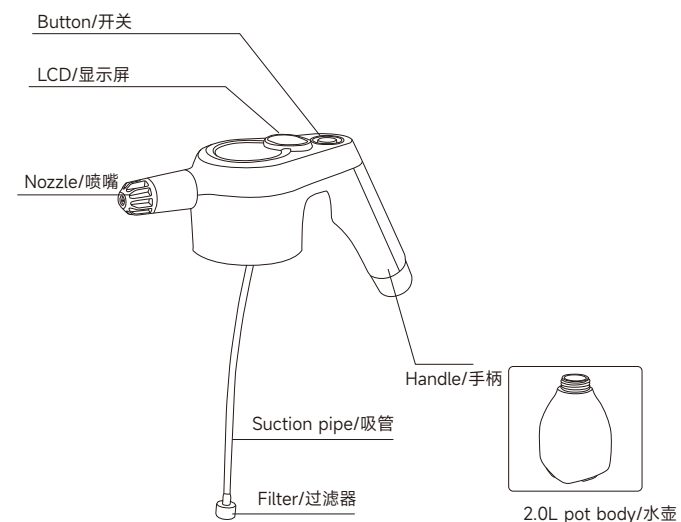

4. Warning/警告

- (1) It is strictly prohibited to disassemble and assemble with out permission;
 - (2) Children are not allowed to use the product;
 - (3) Avoid being placed in a moist environment to avoid short circuit.
- (1) 严禁私自拆装；
(2) 儿童不得使用该产品；
(3) 避免放置在潮湿的环境中以避免短路。

02


5. Product Structure/产品结构

The Electric Sprayer is powered by a power pack (with a built-in miniature water pump), circuit board with USB rear seat, Li-ion battery, plastic bottles, power switch components, nozzles, USB charging wires, etc.


It is pressurized by a micro-pump, and spray function is realized through spray nozzle. 电动喷壶由电源组（内置微型水泵）、带USB后座的电路板、锂电池、塑料瓶、电源开关组件、喷嘴、USB充电线等。它由微型泵加压，通过喷嘴实现喷射功能。

6. Operation and Usage/操作说明

- (1) Unscrew the bottle and inject the liquid into the bottle. The height of the liquid in the bottle is not recommended to exceed the position of the scale line.
 - (2) Tighten the bottle filled with liquid and the handle assembly, and pay attention to the alignment of the screw thread;
 - (3) Press the power switch to spray wine;
 - (4) Users can adjust the size of the spray angle according to the spray requirements to spray wine;
 - (5) When spraying is finished, press the power switch again and it will be closed;
 - (6) After using strong acids & alkaline, please rinse with water;
- (1) 拧开瓶子，把液体注入瓶子里。瓶内液体的高度不建议超过刻度线的位置。
 - (2) 拧紧装满液体的瓶子和手柄组件，并注意螺纹的对齐；
 - (3) 按下电源开关即可喷洒液体；
 - (4) 用户可以根据喷涂要求调整喷涂角度的大小来喷涂液体；
 - (5) 喷涂完成后，再次按下电源开关，关闭机器；
 - (6) 使用强酸和强碱后，用清水冲洗一遍内部管路。

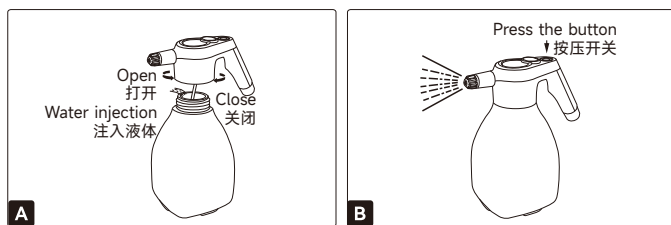

03

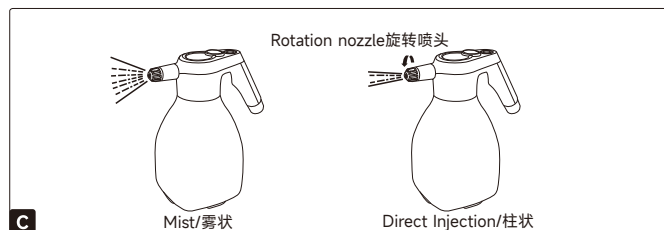

7. Charging instructions/充电说明

- (1) The lithium battery can be used with a certain amount of electricity when it leaves the factory;
 - (2) Please charge in time when low power;
 - (3) Use USB universal plug or charging pad for charging. It is recommended to use standard 1000ma power adapter;
 - (4) When the quantity is in-sufficient, the circuit board automatically protects the equipment; from work and needs to be charged in time;
 - (5) When the charging starts, the screen will show the electric quantity. The charging time is generally 3-4 hours ;
 - (6) In order to avoid bad charging contact, the USB charging cable is inserted into the tail seat of the power head assembly or does not shake when it is pulled out;
 - (7) If don't use, it is recommended to charge the battery once every 2-3 months;
- (1) 产品首次使用前请先充满电后使用；
 - (2) 日常电量用完后，以免影响电池寿命，请24小时内充电
 - (3) 使用USB通用插头，建议使用标准1000MA电源适配器
 - (4) 当电量不足时，电路板自动停止工作，需要及时充电，
 - (5) 充电开始时，屏幕会显示电量，充电时间一般为2-3小时；
 - (6) 为避免充电接触不良，连接时请不要随意晃动USB插头；
 - (7) 在未使用状态下，建议每2-3个月给电池充电一次。

04

8. Trouble shooting/故障排除

Problem/故障	Solution/解决方案
1.LCD display E1 屏幕显示E1	Low power, charge in time 提示需要充电、插上充电器充电、即可清除代码。
2.LCD display E2 屏幕显示E2	Remind to power off after 7 minutes' working. Press button of on/off will disappear, press again will resume working again. 提示延时关机、电动花壶在工作7分钟后都会延时关机、按下开关清除代码、再次按下开关即可正常运行。
3.LCD display E3 屏幕显示E3	Motor overloading protection, press button on/off will disappear. 提示电机过载保护、电机电流超过1.5A时电路板会对电机进行保护、或是电机瞬时电流超过1.5A时电路板也会对电机进行保护、按下按键清除代码即可。
4.LCD display FL 屏幕显示FL	PCB board entered testing mode, need the professional disassemble the battery and reassemble it. 电路板进入测试模式、需要在专业人员指导下拆下电池、重新上电即可。
5.100% battery level display when charging, but sprayer can not work when unplug the charging cable. 5.充电的时候电动花壶显示100%，但是拔掉电线后开启使用无反应。	Check if "IN" is on flashing with non-equal, battery damaged or loosen. If "IN" is on flashing with equal, on/off button damaged. 充电显示100%、检查IN是否正常闪烁、如IN闪烁无节奏、则是电池损坏或电池接触不良、如IN闪烁节奏正常则是开关损坏。

05